
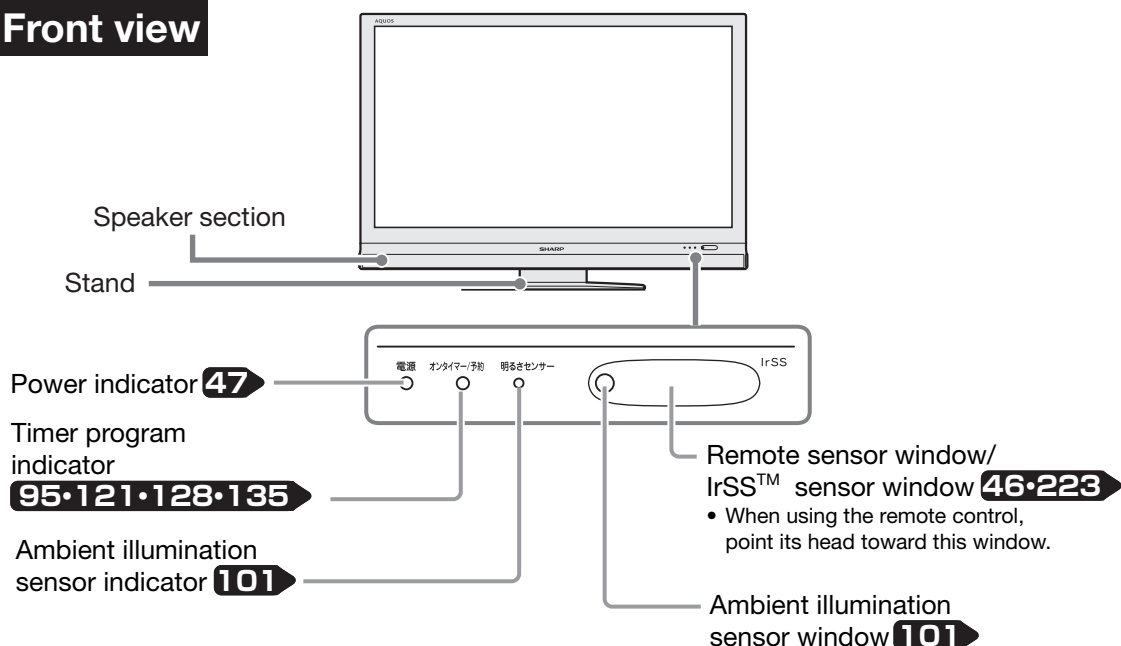


Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right Side view

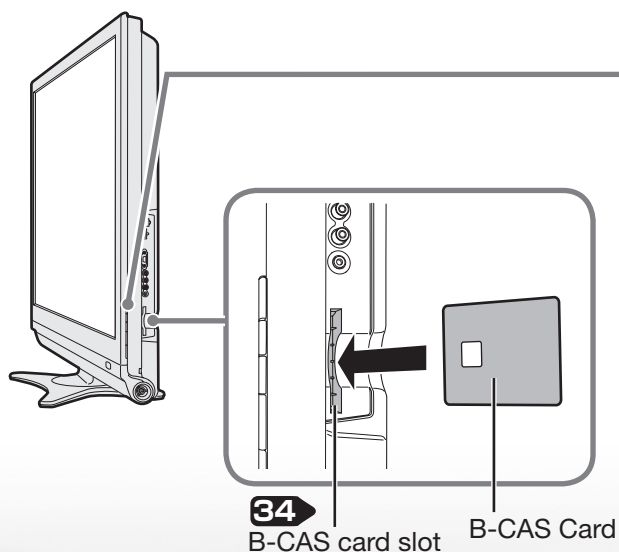


Control panel

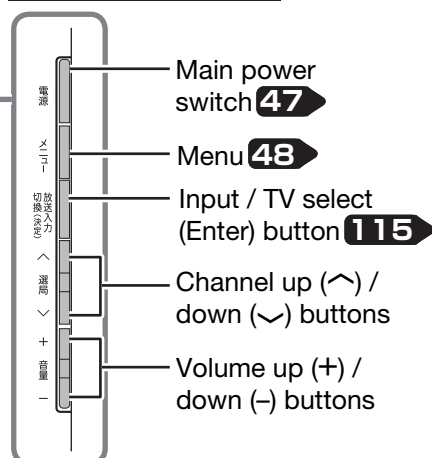

Back view

The illustrations below are those of LC-52DS6.

LC-60DS6/LC-46DS6/LC-42DS6/LC-40DS6/LC-32DS6 has the same layout of jacks and terminals as.

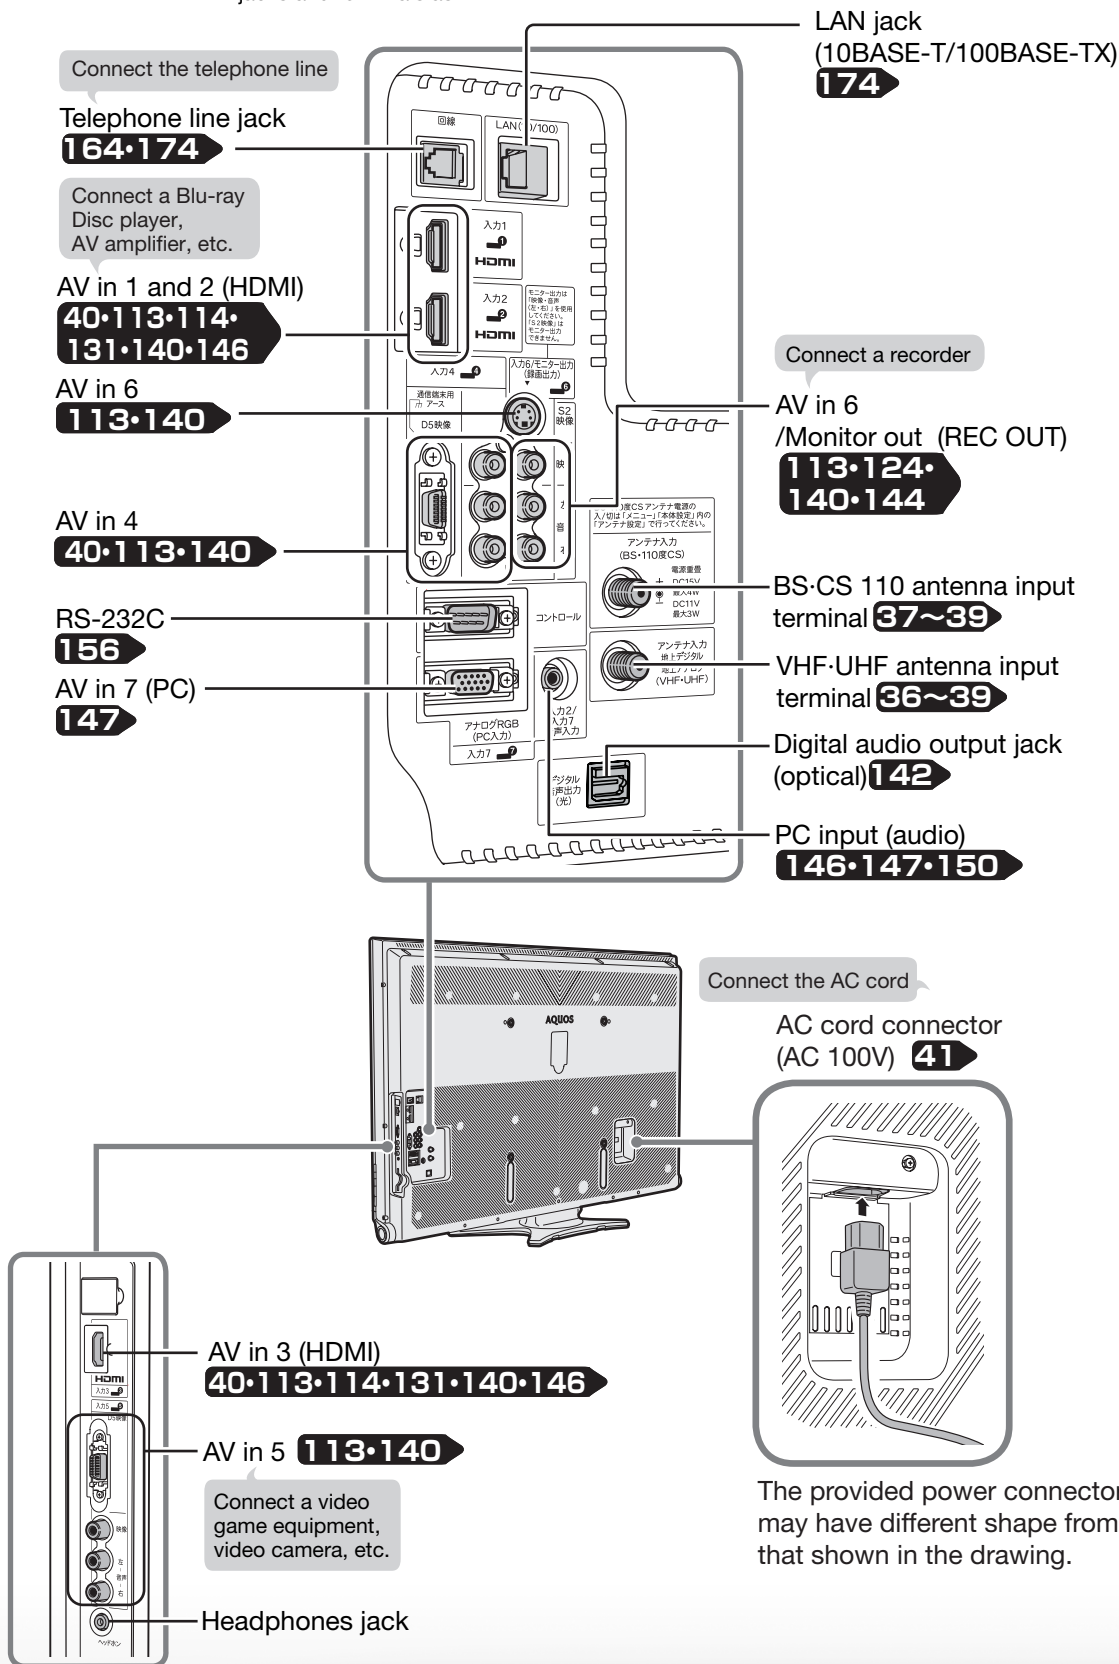

はじめに

準備

番組を見る

録画と再生

ファミリンク
で録画・再生

ゲームオーディオ
パソコンをつなぐ

本機をさらに
活用する

インターネット
を楽しむ

インターネット
で番組を楽しむ

写真の表示・
音楽の再生

故障かなど
寸法図など

English
Guide

Part Names - Remote Control Unit

Active/Standby 47

Press to engage the TV set in the active or standby mode.

CATV

CATV 81

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

地上D Terrestrial digital select 76

BS BS select 76

CS CS select 76

地上A Terrestrial analog select 76

Select the CS digital channel for the first time. 53

消音 Mute 77

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

+ 音量 - Volume up (+)/down (-) 77

Press to adjust the volume.

Linked data broadcast 92

Press to call the data broadcast linked with the current digital TV program.

AV mode select 99

Press to select the picture/sound setting that best matches the current program.

番組表 EPG 84

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

裏番組 Other on-air programs 85

Press to display the EPG for currently on-air programs only (裏番組).

番組情報

Program info 93

Press to display detailed information on the current digital program.

Finish 48

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

お好み登録

Favorite channel select/register 81

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

映像切換

Picture select 91

Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption 91

Press to display, select, or turn off captions when watching a digital program with captions.

音声切換

Audio select 90・91

Press to select the desired audio.

画面表示

Display 78

Press to display or turn off the channel call, etc.

画面サイズ

Screen mode 97・148

Press to select the desired screen mode.

3桁入力

Digital channel number input 80

Use to select a digital channel by entering the 3-digit channel number.

インターネット

Internet 180・200

Press to connect to the internet.

VOD操作

VOD 209・213

Press to display the VOD control panel.

Channel select 77

- Press to select a channel.
- Use to input a number for various settings.

↑ 選局 ↓

Channel up (^)/down (v) 77

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

入力切換

Input select 115

Press to select the desired input.

Familink 134・136~139

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Sleep timer 154

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Menu 48

Press to display or turn off the menu screen.

The menus can be displayed in English. See 275 for instructions on how to switch the display language.

Cursor (up, down, left, right) 48

Use to select a menu item, column, etc.

決定 Enter/Confirm 48

Press to confirm a selected setting or menu item.

Return 48

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

青 赤 緑 黄

Color 86~87

Use to operate EPGs and data program screens.

静止

Freeze 92

Press to freeze the picture.

テレビデータ

Media select 76

Press to select the desired media (TV or data).

Familink 134・136~139

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

To open the cover

Hold the cover by the projections on both sides and lift upwards.



Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



お知らせ

誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Display the menu screen.

メニューを表示する

Press
メニュー

2

Select “本体設定” (Setup) –

“Language (言語設定)” .

「本体設定」－「Language (言語設定)」
を選ぶ


Enter.

決定する



Press

決定

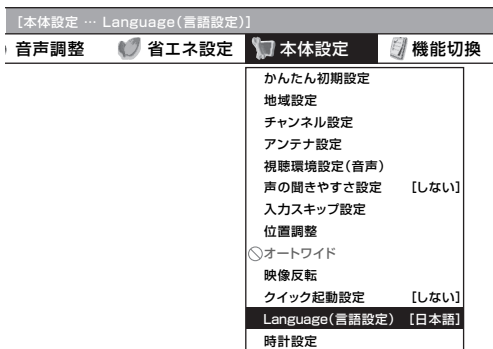

3

Select “English” .

「English」を選ぶ


Enter.

決定する



Press

決定

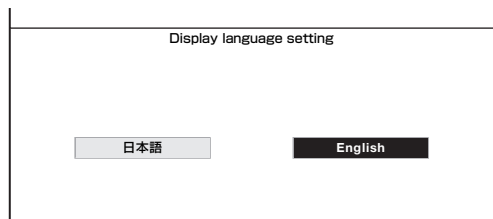

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

4

Finish this operation.

終了する

Press
終了



はじめに

準備

番組を見る

録画と再生

ファミリーリンク
で録画・再生

ゲームボーイ
パソコンをつなぐ

本機をさらに
活用する

インターネット
を楽しむ

インターネット
で番組を楽しむ

写真の表示・
音楽の再生

故障かなど
トラブルなど

English
Guide